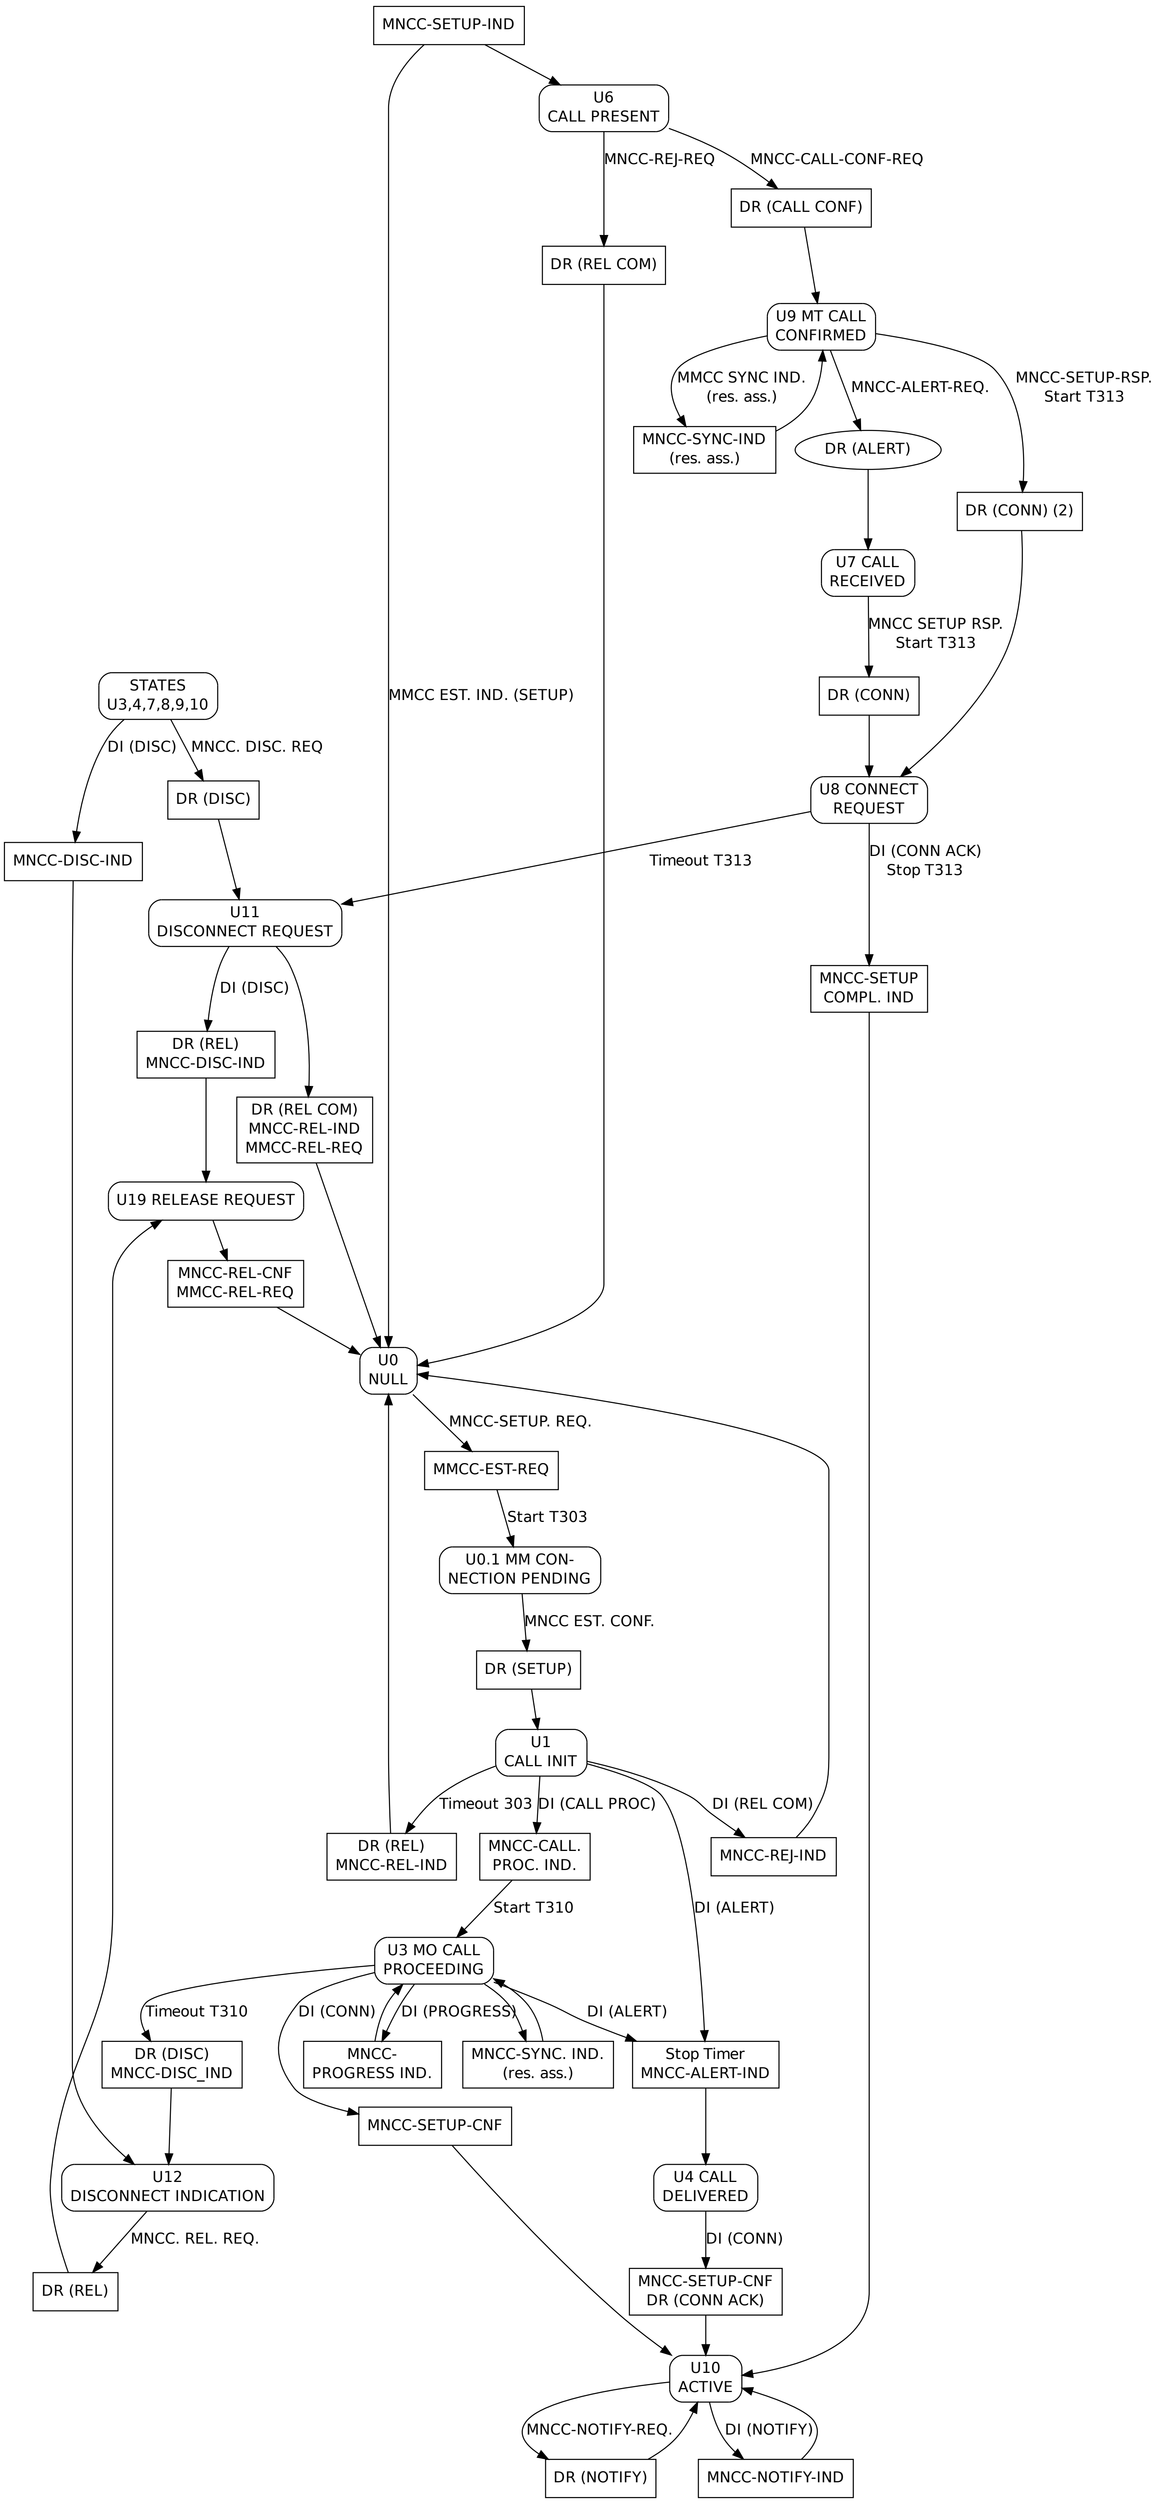
MNCC-SETUP-IND
U6
CALL PRESENT
MNCC-REJ-REQ
MNCC-CALL-CONF-REQ
DR (CALL CONF)
DR (REL COM)
U9 MT CALL
CONFIRMED
MMCC SYNC IND.
(res. ass.)
MNCC-ALERT-REQ.
MNCC-SETUP-RSP.
Start T313
MNCC-SYNC-IND
(res. ass.)
DR (ALERT)
DR (CONN) (2)
U7 CALL
RECEIVED
MNCC SETUP RSP.
Start T313
DR (CONN)
MMCC EST. IND. (SETUP)
STATES
U3,4,7,8,9,10
DI (DISC)
MNCC. DISC. REQ
DR (DISC)
U8 CONNECT
REQUEST
MNCC-DISC-IND
Timeout T313
DI (CONN ACK)
Stop T313
U11
DISCONNECT REQUEST
MNCC-SETUP
COMPL. IND
DI (DISC)
DR (REL)
MNCC-DISC-IND
DR (REL COM)
MNCC-REL-IND
MMCC-REL-REQ
U19 RELEASE REQUEST
MNCC-REL-CNF
MMCC-REL-REQ
U0
NULL
MNCC-SETUP. REQ.
MMCC-EST-REQ
Start T303
U0.1 MM CON-
NECTION PENDING
MNCC EST. CONF.
DR (SETUP)
U1
CALL INIT
Timeout 303
DI (CALL PROC)
DI (REL COM)
DR (REL)
MNCC-REL-IND
MNCC-CALL.
PROC. IND.
MNCC-REJ-IND
Start T310
DI (ALERT)
U3 MO CALL
PROCEEDING
Timeout T310
DI (CONN)
DI (PROGRESS)
DI (ALERT)
DR (DISC)
MNCC-DISC_IND
MNCC-
PROGRESS IND.
MNCC-SYNC. IND.
(res. ass.)
Stop Timer
MNCC-ALERT-IND
MNCC-SETUP-CNF
U12
DISCONNECT INDICATION
U4 CALL
DELIVERED
MNCC. REL. REQ.
DI (CONN)
DR (REL)
MNCC-SETUP-CNF
DR (CONN ACK)
U10
ACTIVE
MNCC-NOTIFY-REQ.
DI (NOTIFY)
DR (NOTIFY)
MNCC-NOTIFY-IND